


OUTSIDE VIEW



INSIDE VIEW

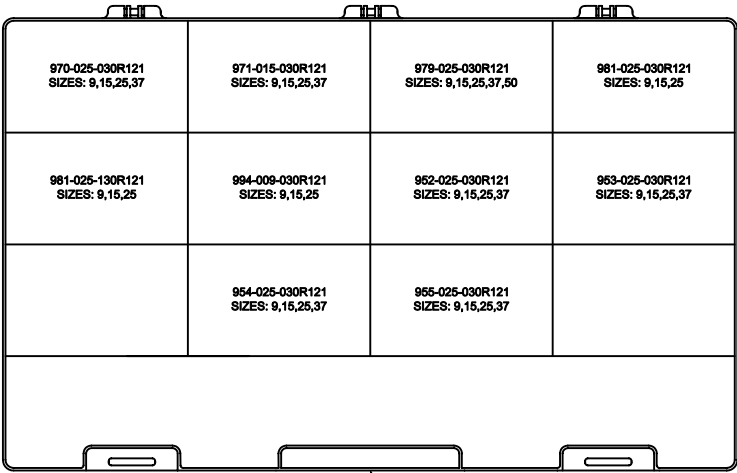

KIT INCLUDES:

QTY	PART NUMBER
1	970-025-030R121
1	971-015-030R121
1	979-025-030R121
1	981-025-030R121
1	981-025-130R121
1	994-009-030R121
1	952-025-030R121
1	953-025-030R121
1	954-025-030R121
1	955-025-030R121
1	QUICK REFERENCE GUIDE TO BACKSHELLS

RoHS COMPLIANT

	THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF NorComp AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OF SALE OF APPARATUS WITHOUT WRITTEN PERMISSION.	DRAWN: N. Kovalsky		DATE: 06-11-07		
		CHECKED:		DATE:		
NorComp			SCALE: 1 : 1/4	SHEET 1 OF 1		REV 1
			DWG NO. DESIGN KIT - 030			